



OPERATING INSTRUCTIONS

The sight QUICKsight 5.0 VR you have purchased is intended for the use on shotguns with ventilated rail up to a rail width of 10 mm. Adjusting an optimum hit point position requires exact observance of these operating instructions.

QUICKsight 5.0 VR – Shotgun sight with a flat design

This sight has a power-saving automatic brightness control of the reticle. By attaching the protective cap or putting the shotgun down in the dark gun safe, the power consumption is reduced to a minimum. Thus, unintentional discharging of the battery can be prevented.

Scope of delivery

- 1 Mounting plate for ventilated rails up to 10 mm with 2 TORX countersunk screws M3x8
- 1 TORX offset screwdriver T10
- 1 Covering cap
- 1 Button cell 3 V, CR2032
- Cleaning textile for optics
- Operating manual

Inserting the battery

First, unscrew the cover of the battery compartment by turning it counter-clockwise. Then, insert a lithium battery CR2032 (scope of delivery) in the battery compartment with the positive terminal facing up (**Figure 1**). The lettering of the button cell must be readable. Tighten the cover of the battery compartment by turning it clockwise until a resistance by the seal ring can be felt. Do not use any additional tools.

Operation

After having inserted the battery, the sight is operational.

Mounting on the barrel rail

For this purpose, the tongue of the mounting plate must be slid into the opening of the barrel rail (**Figure 2**). Here, the pins **A** are to point away from the barrel. Now, place the sight with the glass body towards the muzzle on the pins **A** (**Figure 3**). Slightly tighten the left TORX screw **B** using the supplied TORX offset screwdriver. Insert the second screw **C** as well and slightly tighten it. It must still be possible to move the sight on the rail. Now, adjust the position of the sight in such a way that the sight is in contact with the left side of the rail over the entire length. Please check the position and make sure that the barrel rail lies properly in the groove of the sight. Tighten both screws **B** and **C** evenly in this position.

Now, the QUICKsight 5.0 VR is properly mounted on the gun and operational.